



Dell Dimension 4600 Side Panel Replacement

This guide will teach you to open the case of your Dell Dimension 4600 to access the internal parts.

Written By: Daniel Crawford



INTRODUCTION

Use this guide to remove the side panel from the computer and gain access to the internal components.

Step 1 — Side Panel



- Locate the case cover latch on the back of the computer.

Step 2



- Using your index finger, slide and hold the cover latch down.
- While holding the latch down, place your other hand flat on the side of the case and firmly shift the side panel to the left until it disengages.

Step 3



- Grab the edge of the panel and slide it away from the case until it is removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 09:37:56 AM.